

**RTE Series — Analog Timers**



**NEW DESIGN!**

Key features of the RTE series include:

- 20 time ranges and 10 timing functions
- Time delays up to 600 hours
- Space-saving package
- High repeat accuracy of  $\pm 0.2\%$
- ON and timing OUT LED indicators
- Standard 8- or 11-pin and 11-blade termination
- 2 form C delayed output contacts
- 10A Contact Rating



Cert. No. E9950913332316 (EMC, RTE)  
cert. No. BL960813332355 (LVD, RTE)



UL Listed  
File No. E66043



General Specifications				
Operation System	Solid state CMOS Circuit			
Operation Type	Multi-Mode			
Time Range	0.1sec to 600hours			
Pollution Degree	2 (IE60664-1)			
Over voltage category	III (IE60664-1)			
Rated Operational Voltage	AF20 100-240V AC(50/60Hz)			
	AD24 24V AC(50/60Hz)/24V DC			
	D12 12V DC			
Voltage Tolerance	AF20 85-264V AC(50/60Hz)			
	AD24 20.4-26.4V AC(50/60Hz)/21.6-26.4V DC			
	D12 10.8-13.2V DC			
Input off Voltage	Rated Voltage x10% minimum			
Ambient Operating Temperature	-20 to +65°C (without freezing)			
Ambient Storage and Transport Temperature	-30 to +75°C (without freezing)			
Relative Humidity	35 to 85%RH (without condensation)			
Atmospheric Pressure	80kPa to 110kPa (Operating), 70kPa to 110kPa (Transport)			
Reset Time	100msec maximum			
Repeat Error	$\pm 0.2\%$ , $\pm 20\text{msec}^*$			
Voltage Error	$\pm 0.2\%$ , $\pm 20\text{msec}^*$			
Temperature Error	$\pm 0.5\%$ , $\pm 20\text{msec}^*$			
Setting Error	$\pm 10\%$ maximum			
Insulation Resistance	100M $\Omega$ minimum (500V DC)			
Dielectric Strength	Between power and output terminals: 2000V AC, 1 minute Between contacts of different poles: 2000V AC, 1 minute Between contacts of the same pole: 1000V AC, 1 minute			
Vibration Resistance	10 to 55Hz amplitude 0.5mm <sup>2</sup> hours in each of 3 axes			
Shock Resistance	Operating extremes: 98m/sec <sup>2</sup> (10G) Damage limits: 490m/sec <sup>2</sup> (50G) 3 times in each of 3 axes			
Degree of Protection	IP40 (enclosure) (IEC60529)			
Power Consumption (Approx.)	TYPE	RTE-P1, -B1	RTE-P2, -B2	
	AF20	120V AC/60Hz	6.5VA	6.6VA
		240V AC/60Hz	11.6VA	11.6VA
	24V AC 60Hz/DC	3.4VA/1.7W	3.5VA/1.7W	
D12	1.6W	1.6W		
Mounting Position	Free			
Dimensions	RTE-P1, P2	40Hx 36W x 77.9D mm		
	RTE-B1, B2	40Hx 36W x 74.9D mm		
Weight (Approx.)	RTE-P1	RTE-P2	RTE-B1, -B2	
	87g	89g	85g	

Contact Ratings		
Contact Configuration	2 Form C, DPDT (Delay output)	
Allowable Voltage / Allowable Current	240V AC, 30V DC / 10A	
Maximum Permissible Operating Frequency	1800 cycles per hour	
Rated Load	Resistive	10A 240V AC, 30V DC
	Inductive	7A 240V AC, 30V DC
	Horse Power Rating	1/6 HP 120V AC, 1/3 HP 240V AC
Life	Electrical	500,000 op. minimum (Resistive)
	Mechanical	50,000,000 op. minimum

**RTE Table of Contents**


- Specifications — G-8
- Part Number Guide — G-9
- Part Number List — G-9
- RTE Timing Diagrams — G-10
- RTE Accessories — G-11
- Instructions: Setting Timer — G-13
- RTE Dimensions — G-14
- General Timing Diagrams — G-4



\*For the value of the error against a preset time, whichever the largest.

**Part Numbering Guide**

RTE series part numbers are composed of 4 part number codes. When ordering a RTE series part, select one code from each category.  
 Example: RTE-P1AF20

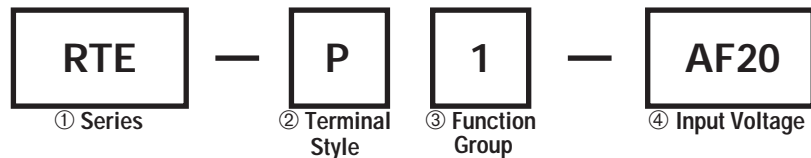
**Part Numbers: RTE Series**

	Description	Part Number Code	Remarks
① Series	RTE series	RTE	For internal circuits, see next page.
② Terminal Style	Pin	P	Select one only.
	Blade	B	
③ Function Group	ON-delay, interval, cycle OFF, cycle ON	1	Each function group has different timing functions. See page G-4.
	ON-delay, cycle OFF, cycle ON, signal ON/OFF delay, OFF-delay, one-shot	2	
④ Input Voltage	100 to 240V AC(50/60Hz)	AF20	
	24V AC(50/60Hz)/24V DC	AD24	
	12V DC	D12	


**Part Number List**
**Part Numbers**

New Part Number	Voltage	Terminals	Obsolete Part Number
RTE-B1AD24	24V AC/DC	Blade	RTE-B11-24V
			RTE-B12-24V
RTE-B1AF20	100 - 240V AC	Blade	RTE-B11-AC120V
			RTE-B12-AC120V
RTE-B1D12	12V DC	Blade	RTE-B11-12V
			RTE-B12-12V
RTE-B2AD24	24V AC/DC	Blade	RTE-B21-24V
			RTE-B22-24V
RTE-B2AF20	100 - 240V AC	Blade	RTE-B21-AC120V
			RTE-B22-AC120V
RTE-B2D12	12V DC	Blade	RTE-B21-12V
			RTE-B22-12V
RTE-P1AD24	24V AC/DC	8 Pin	RTE-P11-24V
			RTE-P12-24V
RTE-P1AF20	100 - 240V AC	8 Pin	RTE-P11-AC120V
			RTE-P12-AC120V
RTE-P1D12	12V DC	8 Pin	RTE-P11-12V
			RTE-P12-12V
RTE-P2AD24	24V AC/DC	11 Pin	RTE-P21-24V
			RTE-P22-24V
RTE-P2AF20	100 - 240V AC	11 Pin	RTE-P21-AC120V
			RTE-P22-AC120V
RTE-P2D12	12V DC	11 Pin	RTE-P21-12V
			RTE-P22-12V



- For schematics, see page G-10.
- For timing diagrams, see page G-10.
- All timers have multiple time ranges. For a list of ranges, see page G-13.
- For socket and accessory information, see page G-11.


Timing Diagrams

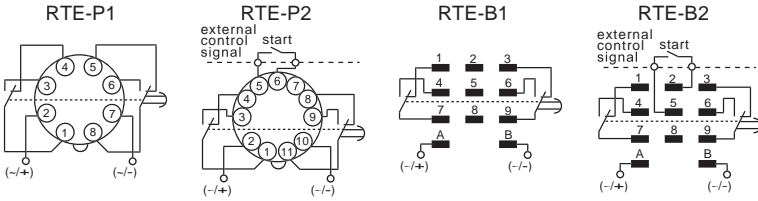

1. RTE-P2: Do not apply voltage to terminals #5, #6 & #7.
2. RTE-B1, -B2: Do not apply voltage to terminals #2, #5 & #8.
3. IDEC sockets are as follows: RTE-P1: SR2P-06\* pin type socket, RTE-P2: SR3P-05\* pin type socket, RTE-B1, -B2: SR3B-05\* blade type socket, (\*-may be followed by suffix letter A,B,C or U).


**A: ON-Delay 1 (power start)**

Set timer for desired delay, apply power to coil. Contacts transfer after preset time has elapsed, and remain in transferred position until timer is reset. Reset occurs with removal of power.

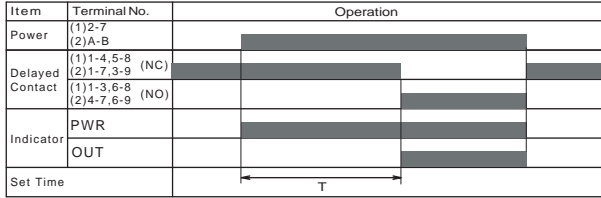


**B: Interval (power start)**

Set timer for desired delay, apply power to coil. Contacts transfer immediately, and return to original position after preset time has elapsed. Reset occurs with removal of power.

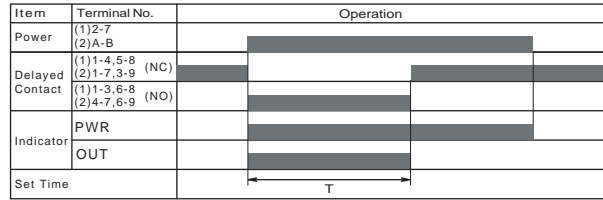


**C: Cycle 1 (power start, OFF first)**

Set timer for desired delay, apply power to coil. First transfer of contacts occurs after preset delay has elapsed, after the next elapse of preset delay contacts return to original position. The timer now cycles between on and off as long as power is applied (duty ratio 1:1).

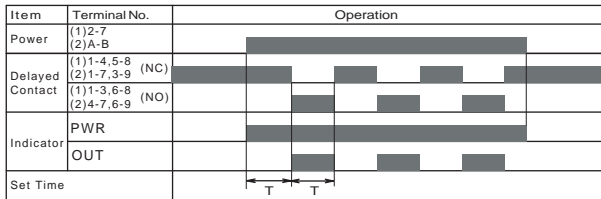

**D: Cycle 3 (power start, ON first)**


Functions in same manner as Mode C, with the exception that first transfer of contacts occurs as soon as power is applied. The ratio is 1:1. Time On = Time Off

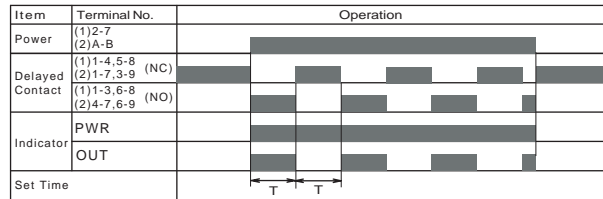

**RTE-P2, -B2**


**A: ON-Delay 2 (signal start)**

When a preset time has elapsed after the start input turned on while power is on, the NO output contact goes on.

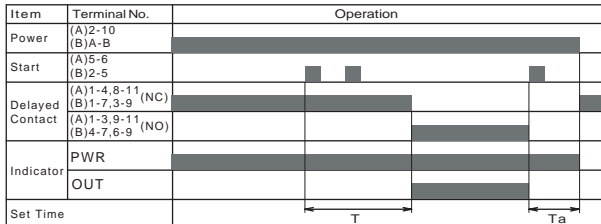


**B: Cycle 2 (signal start, OFF first)**

When the start input turns on while power is on, the output oscillates at a preset cycle (duty ratio 1:1), starting while the NO contact off.

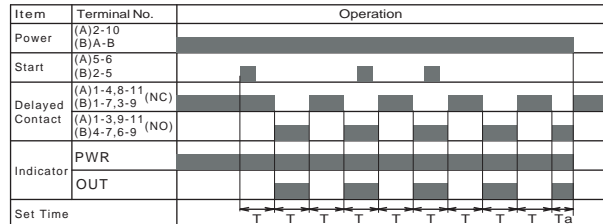


**C: Cycle 4 (signal start, ON first)**

When the start input turns on while power is on, the NO contact goes on. The output oscillates at a preset cycle (duty ratio 1:1).

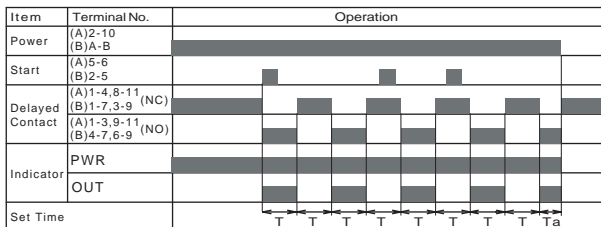


**D: Signal ON/OFF-Delay**

When the start input turns on while power is on, the NO output contact goes on. When a preset time has elapsed while the start input remains on, the output contact goes off. When the start input turns off, the NO contact goes on again. When a preset time has elapsed after the start input turned off, the NO contact goes off.

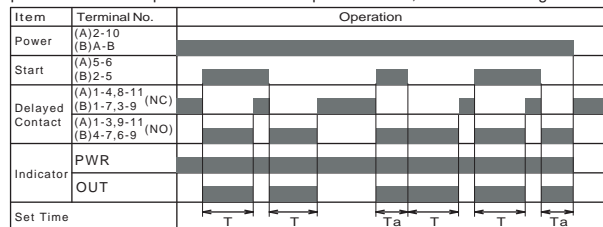


**E: Signal OFF-Delay**

When power is turned on while the start input is on, the NO output contact goes on. When a preset time has elapsed after the start input turned off, the NO output contact goes off.

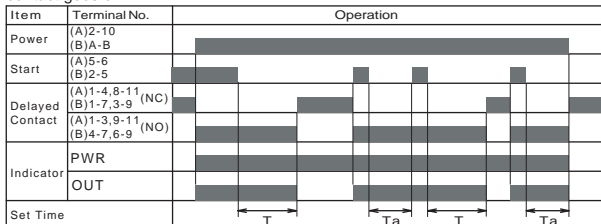

**F: One-Shot (signal start)**

When the start input turns on while power is on, the NO output contact goes on. When a preset time has elapsed, the NO output contact goes off.

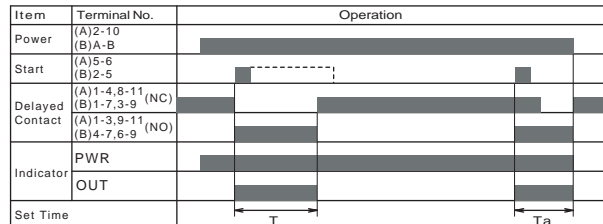

Note : T=Set Time, Ta=Shorter than set time, (1): RTE-P1, (2): RTE-B1, (A): RTE-P2, (B): RTE-B2


**DIN Rail Mounting Accessories**

**Part Numbers: DIN Rail/Surface Mount Sockets and Hold-Down Springs**

DIN Rail Mount Socket				Applicable Hold-Down Springs	
Style	Appearance	Use with Timers	Part No.	Appearance	Part No.
11-Pin Screw Terminal (dual tier)		RTE-P2	SR3P-05		SFA-203
11-Pin FingerSafe Socket		RTE-P2	SR3P-05C		
8-Pin Screw Terminal		RTE-P1	SR2P-06		SFA-202
11-Blade Screw Terminal		RTE-B1 RTE-B2	SR3B-05		
DIN Mounting Rail Length 1000mm		—	BNDN1000		



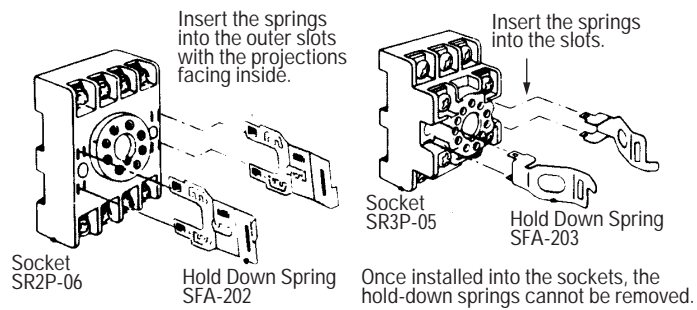

**Installation of Hold-Down Springs**

**DIN Rail Mount Socket**



**Panel Mounting Accessories**



**Part Numbers: Flush Panel Mount Adapter and Sockets that use an Adapter**

Accessory	Description	Appearance	Use with	Part No.
<b>Panel Mount Adapter</b>	Adaptor for flush panel mounting RTE timers		All RTE timers	RTB-G01
<b>Sockets for use with Panel Mount Adapter</b>	8-pin screw terminal	 (Shown: SR6P-M08G for Wiring Socket Adapter)	RTE-P1	SR6P-M08G
	11-pin screw terminal		RTE-P2	SR6P-M11G
	8-pin solder terminal		RTE-P1	SR6P-S08
	11-pin solder terminal		RTE-P2	SR6P-S11




*No hold down clips are available for flush panel mounting applications.*

Temperature Derating Curves

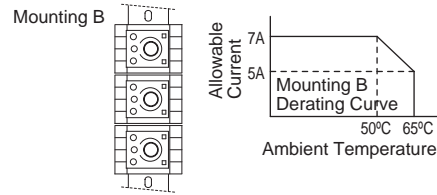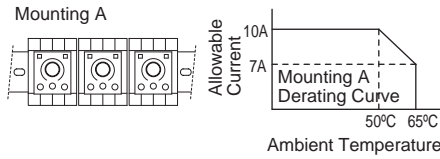


Instructions

Types

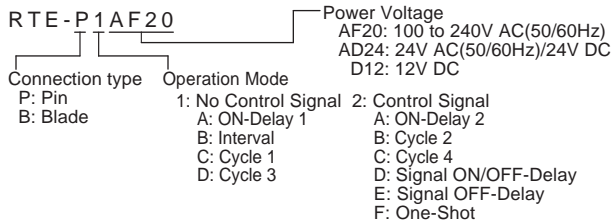

Switch Settings

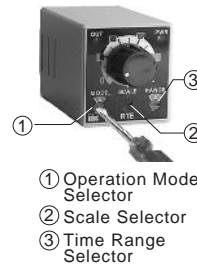

1. Turn the selectors securely using a flat screwdriver 4mm wide (maximum). Note that incorrect setting may cause malfunction. Do not turn the selectors beyond their limits.

2. Since changing the setting during timer operation may cause malfunction, turn power off before changing.

Safety Precautions

Special expertise is required to use Electronic Timers.

- All Electronic Timers are manufactured under IDEC's rigorous quality control system, but users must add a backup or fail safe provision to the control system when using the Electronic Timer in applications where heavy damage or personal injury may occur should the Electronic Timer fail.
- Install the Electronic Timer according to instructions described in this catalog.
- Make sure that the operating conditions are as described in the specifications. If you are uncertain about the specifications, contact IDEC in advance.
- In these directions, safety precautions are categorized in order of importance under Warning and Caution.

Warnings

Warning notices are used to emphasize that improper operation may cause severe personal injury or death.


- Turn power off to the Electronic timer before starting installation, removal, wiring, maintenance, and inspection on the Electronic Timer.
- Failure to turn power off may cause electrical shocks or fire hazard.
- Do not use the Electronic Timer for an **emergency stop circuit** or **interlocking circuit**. If the Electronic Timer should fail, a machine malfunction, breakdown, or accident may occur.

Caution


Caution notices are used where inattention might cause personal injury or damage to equipment.

- The Electronic Timer is designed for installation in equipment. Do not install the Electronic Timer outside equipment.
- Install the Electronic Timer in environments described in the specifications. If the Electronic Timer is used in places where it will be subjected to high-temperature, high-humidity, condensation, corrosive gases, excessive vibrations, or excessive shocks, then electrical shocks, fire hazard, or malfunction could result.
- Use an IEC60127-approved fuse and circuit breaker on the power and output line outside the Electronic Timer.
- Do not disassemble, repair, or modify the Electronic Timer.
- When disposing of the Electronic Timer, do so as industrial waste.


Dimensions

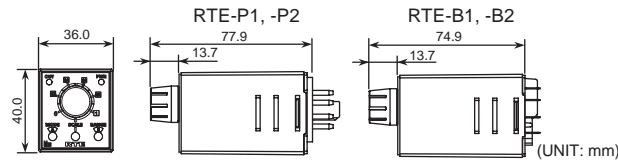


SR2P-06 Socket

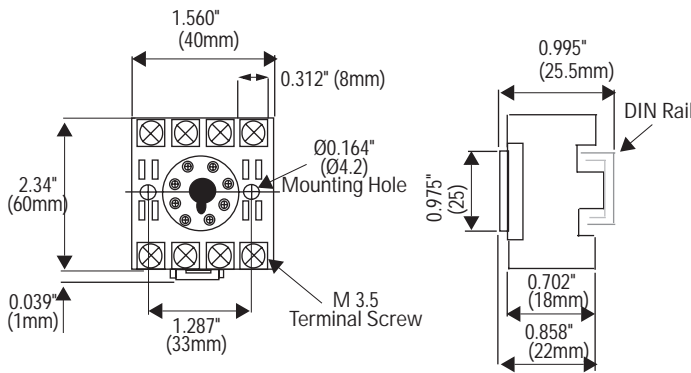

SR3P-06 Socket

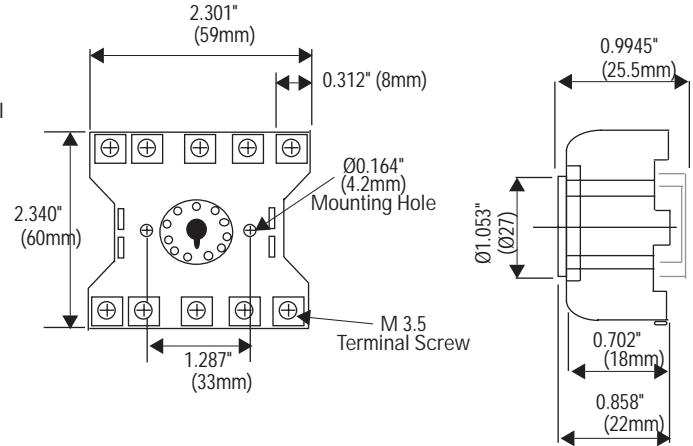

SR3B-05 Socket

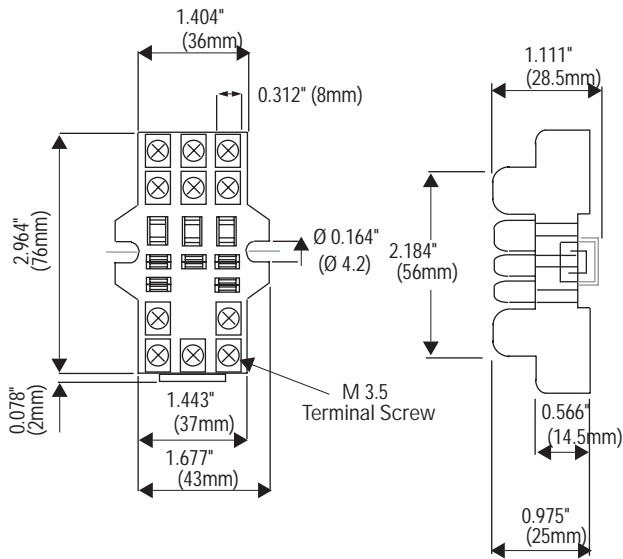

BNDN1000 DIN Rail

